



# PREPARING TO PLASTERBOARD

USG BORAL SHEETROCK® WALL BOARD



This info-sheet is for anyone who wants to install a plasterboard wall, ceiling or cornice. It will help you choose the materials you're going to need and the things to prepare before you start your project.

## OTHER INFO-SHEETS

- Installing a plasterboard wall
- Installing a plasterboard ceiling
- Jointing and finishing plasterboard
- Installing a cornice
- Repairing holes and cracks in plasterboard

Download these info-sheets or watch the videos at [USGBoral.com/au/diy](http://USGBoral.com/au/diy)

To watch as a video tutorial:



1. DOWNLOAD THE  
FREE LAYAR APP



2. SCAN THIS PAGE



3. WATCH THE VIDEO!



## INSPECTION

1. First inspect the framing of the wall or ceiling where you want to install new plasterboard.
2. Take a straight-edge, and check that all the wall studs, noggings and ceiling joists are in true alignment. Trim back or pack-out framing members as needed. Also ensure all surfaces to be glued are clean and dry.



### IMPORTANT!


**If installing plasterboard to metal frames or masonry walls, please contact USG Boral TecASSIST® on 1800 811 222 or your nearest USG Boral stockist.**

## WHAT YOU'LL NEED

For walls, use 10mm USG Boral SHEETROCK® wallboard. Install the sheets horizontally across timber wall studs. Wall studs should be spaced a maximum of 600mm apart.



For ceilings, use 10mm SHEETROCK® ceiling board. Install the sheets at 90 degrees to the ceiling joists. Joists should be spaced a maximum of 600mm apart.

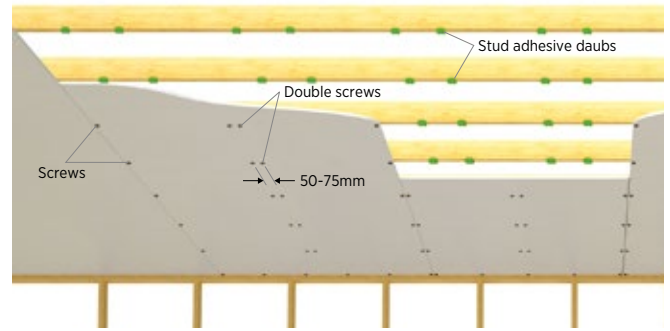

Plasterboard comes in several different sizes. To work out how much you need, measure the area to be covered and draw up a sketch. Then ask our staff to help you select the right-size sheets for your project.



They'll also help you select the following to complete your project:

- USG Boral Stud Adhesive
- Plasterboard screws or nails
- USG Boral Jointing compounds
- USG Boral Paper Jointing Tape
- Tools

If you're planning to install cornice, you'll need some lengths of USG Boral SHEETROCK® cove cornice and Cornice Adhesive.



### MORE INFORMATION

Download the USG Boral Plasterboard Installation Manual for comprehensive technical information and installation guidelines.

[USGBoral.com/au/installation](https://www.usgboral.com/au/installation)



## WET AREAS

Please note that these instructions don't cover walls in wet areas.

When installing plasterboard in areas such as bathrooms, en suites or laundries, you will need to use USG Boral WetStop™ or Multistop™ Plasterboard, that are designed to resist moisture.

Follow the USG Boral installation instructions for wet areas, found in our Plasterboard Installation Manual.



### SAFETY FIRST!

- Ensure any ladders, scaffolding, trestles or planks you use are adequate and safe
- Read cautionary notes on all product packaging
- Wear safety gloves when using sharp tools
- Wear a dusk mask and eye protection when sanding
- We recommend you consult with a licensed electrician and/or plumber about any electrical wiring and/or plumbing requirements, prior to installing plasterboard

## NEED HELP?

Call **TecASSIST®** on **1800 811 222**  
or visit your USG Boral stockist.



UB1062-HAR 04/17

© 2017 USG BORAL. All rights reserved. The trademarks USG BORAL, INNOVATION INSPIRED BY YOU and TecASSIST, Multistop and Wetstop are trademarks or registered trademarks of USG Boral Building Products or one or more of its affiliates. SHEETROCK is a trademark owned by United States Gypsum Company and used under license. The technical information in this document was correct at the time of printing. To ensure the information you are using is current, visit [USGBoral.com/au/diy](http://USGBoral.com/au/diy) USG Boral Building Products Pty Limited - ABN 84 004 231 976 - 251 Salmon Street, Port Melbourne, VIC 3207